ADVANCED HIGH CEILING


METEOR

Atria 6 Series Surface Mount (0-10V / Superior 0-10V / TRIAC)

MINORTANT SAFETY INFORMATION. READ AND FOLLOW ALL SAFETY INSTRUCTIONS


IMPORTANT SAFETY INFORMATION. READ AND FOLLOW ALL SAFETY INSTRUCTIONS. Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker. All servicing or relamping must be performed by qualified service personnel. Product must be grounded to avoid potential electric shock or other potential hazard. Product must be at locations and at heights and in a manner consistent with its intended use, and in compliance with Electrical Code and local codes.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

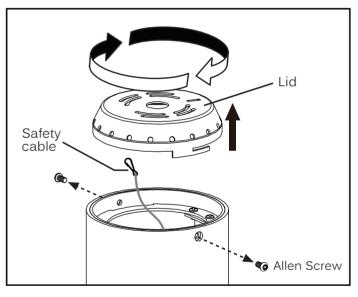

Step 1

Loosen two Allen screws on the side of the fi xture. Twist and lift up the lid from cylinder. Unhook the safety cable from cylinder to detach the lid.

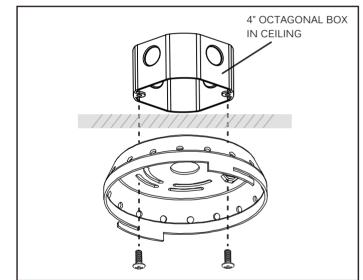

Step 2

Attach the lid directly to 4" square or octagonal junction box (by others) using hardware supplied with junction box.


METEOR LIGHTING P: 213.255.2060 F: 213.596.3704 www.meteor-lighting.com

INC03S01-16 V1.1 | Page 1 of 2

*METEOR LIGHTING reserves the right to make changes to this product at any time without prior notice and such modification shall be effective immediately.

ADVANCED HIGH CEILING Atria 6 Series Surface Mount (0-10V / Superior 0-10V / TRIAC)



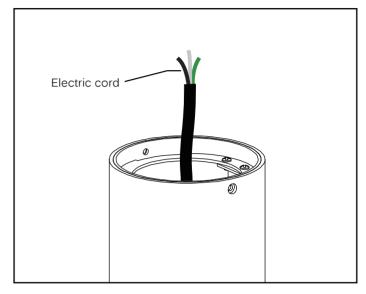


Step 3

Make the electric connection with UL listed connectors or wire nuts (by others), see wiring diagram below. Hook the safety cable back onto the lid.

Wiring Diagram

0-10V / Superior 0-10V

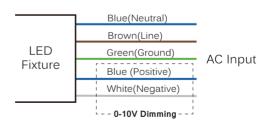


TRIAC



METEOR LIGHTING P: 213.255.2060 F: 213.596.3704 www.meteor-lighting.com

INC03S01-16 V1.1 | Page 2 of 2

*METEOR LIGHTING reserves the right to make changes to this product at any time without prior notice and such modification shall be effective immediately.

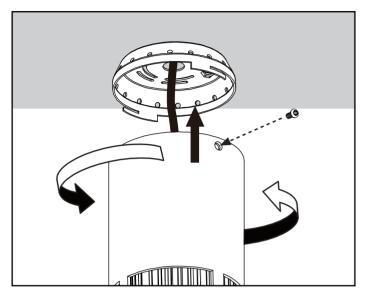

Step 4

Attach cylinder fixture to lid and secure with Allen screws.