ADVANCED HIGH CEILING

DUO 4 - (DMXRS. DMXRD)






IMPORTANT SAFETY INFORMATION. **READ AND FOLLOW ALL SAFETY INSTRUCTIONS**


IMPORTANT SAFETY INFORMATION. READ AND FOLLOW ALL SAFETY INSTRUCTIONS. Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker. All servicing or relamping must be performed by qualified service personnel. Product must be grounded to avoid potential electric shock or other potential hazard. Product must be at locations and at heights and in a manner consistent with its intended use, and in compliance with Electrical Code and local codes.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

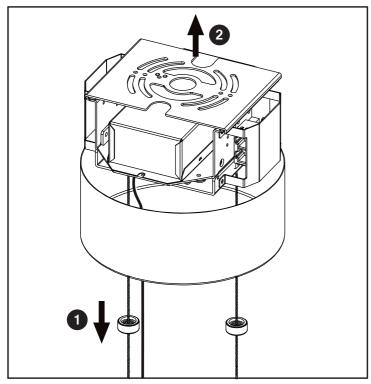

Step 1 Loosen the bolt on the canopy.



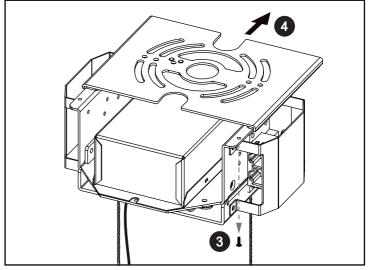


Remove the screw on the bracket in order to be able to loosen the mounting plate.

Slide out the mounting plate.


DUO 4 - (DMXRS. DMXRD)



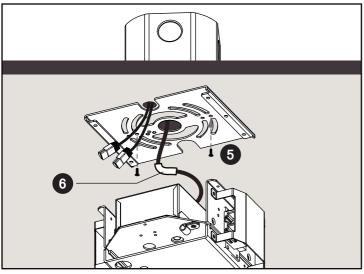


Place the mounting plate onto the ceiling and screw it in place.

Step 6 Connect wires (please refer to wire diagram).

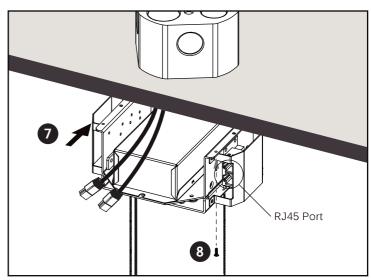


Step 7 Slide the power module onto the mounting plate and connect the RJ45 Cables to the available ports.

Step 8 Screw the bolt to the mounting plate.

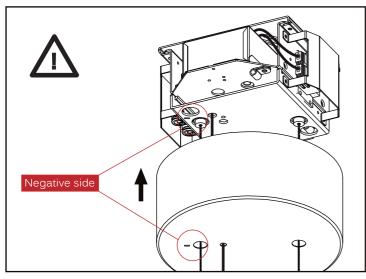


Step 9 Place the canopy around the power module. Ensuring that the negative side is aligned (clearly marked).

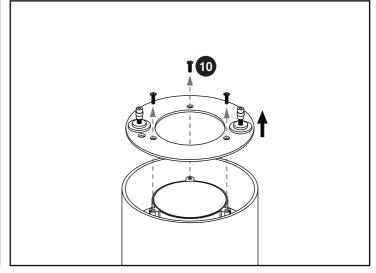

Step 10 Unscrew the ring plate and loosen the cable gripper, Removing the plate from the fixture.

DUO 4 - (DMXRS. DMXRD)




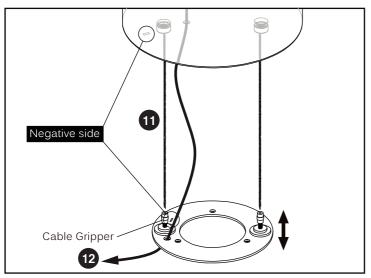

Step 11

Slip the wire through the cable gripper and adjust to desired height, tightening the gripper to lock in place. (Aligning the negative side)

Step 12Slip the dimming cable through the dimming port.

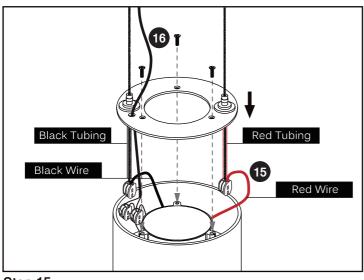


Step 15

Connect the black tubing to the black wire and red tubing to the red wire as well as the dimming WAGO connectors to the dimming wires available.

Step 16

Screw the ring plate to the fixture.

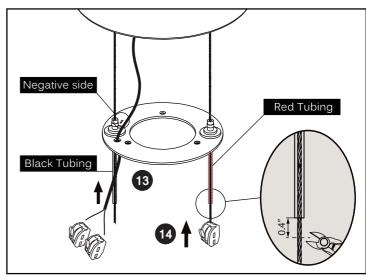


Step 13

Slip the black protective tubing over the negative side wire and the red tubing over the other wire. Ensuring end to end tubing coverage.

Step 14

Leave a 0.4" gap before cutting both wires and connect both wires and dimming cable to a WAGO connector.

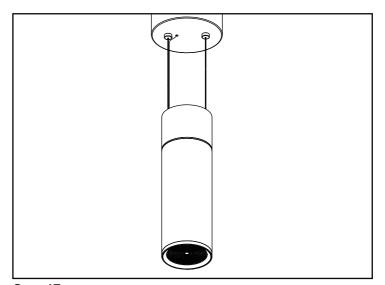

Step 17

Installation Complete.


ADVANCED HIGH CEILING

DUO 4 - (DMXRS. DMXRD)



Wiring Diagram

DMXRS · DMXRD

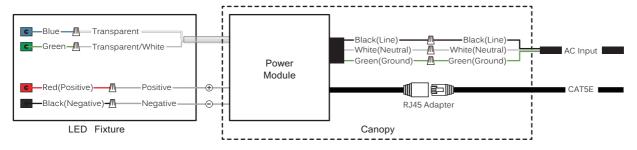

DMXRS · DMXRD / Remote Power

